



Joslyn Clark Service Information – HMI Display

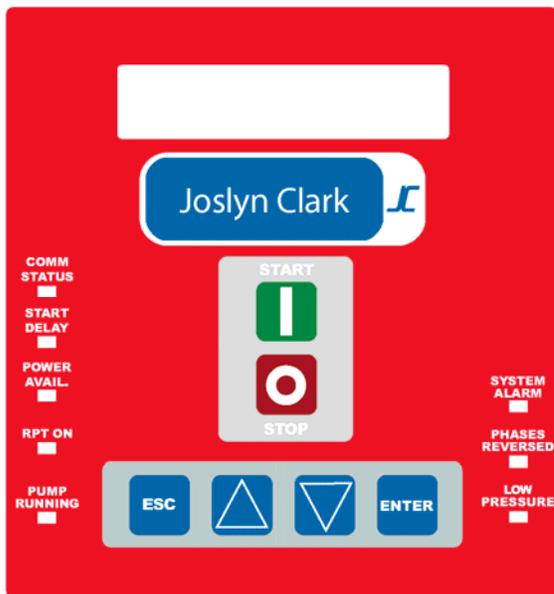

HMI - Human Machine Interface Display

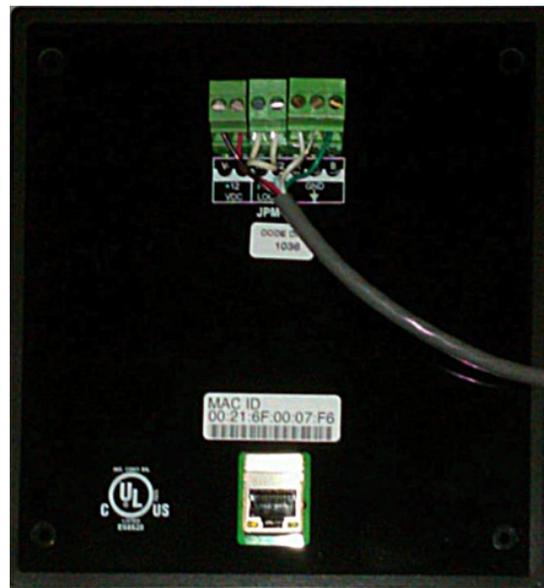

Rear View

When replacing the HMI Display Board, there are some presets that need to be checked and adjusted for your application before starting your controller.

1. Press the ESC key on the HMI Display. This should take you to the Real Time menu.
2. Press the UP ARROW key once and that should bring you to the Installation Setpoints menu. Press ENTER.
3. Enter Password 2008 by pressing and holding Up or Down arrow keys. When 2008 shows in display, Press ENTER.
4. Press the Down Arrow Keys to find the Date and Time Setup sections. Confirm the Date and Time shown. If changes are needed, Press Enter then press Up or Down to make adjustments. Press Enter to retain the new information. When Complete, Press ESC to return to Main Menu
5. Your changes have now been completed be sure to Turn off the Incoming power wait 5 seconds and Turn Power On. This allows the board to read all new settings.
6. If you have Problems or need assistance, please contact Danaher Customer Service at 800-476-6952 and follow the prompts for Service.

June 22, 2012